

# TBS UNIFY PRO RACE

## Settings Quickstart

1. Enter **Channel** menu by holding button for 3s
2. Red LED will flash 1x, Blue LED flashes to show channel number
3. Short press to change channel number
4. Hold button for 3s to proceed to **Band** menu
5. Red LED will flash 2x, Blue LED flashes to show the band number
6. Short press to change band number
7. Hold button for 3s to save or enter **Power** menu\*
8. Red LED will flash 3x.
9. Press button until desired power is selected.

\*Red Items not accessible by default. See full manual to Unlock your Unify Pro RACE. Flip card for link

Red LED		Blue LED							
		1	2	3	4	5	6	7	8
1	Channel	1	2	3	4	5	6	7	8
2	Band	A	B	E	FS	RB	L		
3	Power	25mW	200mW						

Channel	1	2	3	4	5	6	7	8
Band A	5865	5845	5825	5805	5785	5765	5745	5725
Band B	5733	5752	5771	5790	5809	5828	5847	5866
Band E	5705	5685	5665	5645	5885	5905	5925	5945
FS	5740	5760	5780	5800	5820	5840	5860	5880
Race Band	5658	5695	5732	5769	5806	5843	5880	5917
Low Race	5362	5399	5436	5473	5510	5547	5584	5621



# Pit Mode at Races

## Before the Race:

1. Power on while holding the button.
2. Pit Mode has been activated - the Unify Pro RACE will not transmit even if you power cycle it. The Red status LED will be on to show Pit Mode is active.

## Activate VTx for a Race:

1. Power on the Unify Pro RACE.
2. Hold the Button for 5 seconds.
3. Unify Pro RACE will begin transmitting at selected settings.

## After the Race:

1. Power on while holding the button.
2. Pit Mode is now deactivated - the Unify Pro RACE will now transmit again after powerup. The status LEDs are either solid Blue or solid Red and Blue.



**TBS UNIFY PRO RACE**  
the ultimate fpv race transmitter



Manual with unlock instructions, CE certificate:  
[team-blacksheep.com/tbs-unify-pro-manual.pdf](http://team-blacksheep.com/tbs-unify-pro-manual.pdf)